Pallas®

EN COMMERCIAL & DOMESTIC RO
 FR OSMOSE INVERSE COMMERCIALE ET DOMESTIQUE
 DE RO FÜR GEWERBE UND PRIVATHAUSHALTE
 ES ÓSMOSIS INVERSA PARA USO COMERCIAL Y DOMÉSTICO

MANUAL / MANUEL HANDBUCH / MANUAL DE

PALLAS VIVA 6T



DE	PALLAS VIVA 6T HANDBUCH	44
ES	MANUAL DE PALLAS VIVA 6T	64
COMP	PONENT SHEET	84

DEAR CUSTOMER,

Water Treatment Systems use Reverse Osmosis System which is one of the advanced technologies in the world.

Water Treatment Systems have been designed to remove physical, chemical and microbiological pollutants in water and to produce water in drinkable quality.

Water Treatment Systems not only produce drinkable water but also produce water in best quality for meeting the needs of domestic consumption. It helps you enjoy real taste of food and drinks.

Water Treatment Systems provide safe water for you to lead a healthy life. The product is manufactured in modern facilities without giving no harm to environment. It is recommended that you read the manual very carefully before using the product, which is manufactured studiously in.

"Thank you for choosing our product.'

CE

DEFINITIONS OF SYMBOLS USED IN MANUAL



Important information and recommendations about using device



Electric shock warning

Warnings against dangers of safety of life and property



Hot surface warning

PACKAGING INFORMATION



Packing materials are manufactured from recyclable materials by national regulation. Packing waste should not be disposed of with domestic and other waste. Please collect packing wastes at waste collection centres.



CONTENTS

GENERAL INFORMATION	6
STAGES OF CLEAN WATER PRODUCTION IN REVERSE OSMOSIS SYSTEM	7
WORKING PRINCIPLE	7
POINTS TO BE CONSIDERED BEFORE INSTALLATION OF THE DEVICE	8
MANUAL BOX CONTENTS AND ASSEMBLY PARTS	9
DEVICE PROPERTIES	10
MANUAL INSTALLATION AND ASSEMBLY	11
MAINTENANCE AND CLEANING	13
START-UP AFTER MAINTENANCE	
PROCEDURE FOR DISINFECTION	17
WARRANTY CONDITIONS	18
IMPORTANT SAFETY AND ENVIRONMENTAL INSTRUCTIONS & CONSUMER RIGHT	TS 19
TROUBLESHOOTING	20
FREQUENTLY ASKED QUESTIONS	21
AUTHORIZED SERVICES AND SPARE PARTS SUPPLIERS	21

EN

GENERAL INFORMATION

What is REVERSE OSMOSIS?

Osmosis is a process in which water passes through a semi-permeable membrane from a less concentrated solution into a more concentrated one. In naturally occurring osmosis process, reverse osmosis is achieved by pressurizing tohigher concentrated environment. Ifhigher concentrated environment is pressurized, water passes through lower concentreatedone

Semi-permeable membranes used in reverse osmosis systems are in pore diameter of 8-12 angstroms. Water molecules are smaller than 8-12 angstroms and have a neutral electric charge. For this reason, water molecules caneasily pass through the membranes. However, positively and negatively charged ions andmolecules in the water, bacteria and viruses cannot pass through the membranes because they are bigger than 12 angstroms and flow to the drainage.

As a summary, reverse osmosis is the most ideal water treatment method for ion removal by advanced filtration. Reverse osmosis method isone of the rapidly progressing technologies.

Design of the reverse osmosis systemrequires various technical knowledge and experience such as product water quality,raw water analysis, type of membrane etc.

Reverse osmosis practices

Water treatment device is designed to work with minimum water pressure. It does not require chemical use and produces quality water. It is manufactured as a compact device that can easily be installed anywhere thanks to minimum dimensions.

RO treatment device enhances taste andquality of your water. It decreases odor and sediment whilst minimizing chlorine up to 99%. Reverse osmosis device also decreases contaminants such as lead, copper, barium, chromium, mercury, sodium, cadmium, fluoride, nitrite, nitrate and selenium which may be present in water.

Water treatment devices will serve you for many years economically and efficiently as long as they are used according to the installation and assembly instructions and technical specifications described in this manual.

This device shall only be used in accordancewith the design purpose and technical specifications described in brochure and theusers manual. Maintenance and repair must be performed in accordance with the instructions in the users manual and original parts supplied by an authorized service must be used.



ION REMOVAL IN REVERSE OSMOSIS

ION AND ORG. PESTICIDE	REMOVAL (%)	ION AND ORG. PESTICIDE	REMOVAL (%)
Aluminum	97-98	Nickel	97-99
Ammonium	85-95	Nitrate	93-96
Arsenic	94-96	Phosphate	99+
Magnesium	96-98	Potassium	92
Bicarbonate	95-96	Radioactivity	95-98
Bromide	93-96	Radium	97
Cadmium	96-98	Selenium	97
Calcium	96-98	Silica	85-90
Chloride	94-95	Silver	95-97
Chromate	90-98	Sodium	92-98
Chromium	96-98	Sulfate	99+
Copper	97-99	Zinc	98-99
Cyanide	90-95	Boron	50-70
Fluoride	94-96	Borate	30-50
Iron	98-99	Mercury	96-98
Lead	96-98	Bacteria	99+
Mangan	96-98	Virus	99+

WORKING PRINCIPLE

STAGES OF CLEAN WATER PRODUCTION IN REVERSE OSMOSIS SYSTEM

Feed water pressure must be minimum 3 bar forreverse osmosis system to work. If the feed water pressure is not sufficient, the system can be reinforced with a pump.feed water passes through the following filtrations respectively;

- 1st Stage: 5 micron pp sediment filter. The pre-sediment filter retains suspended materials and particles in the water and protects successive filtrations, especially the membrane filter. (1 mm=1000 micron).
- 2nd Stage: Activated carbon filter removes pollutants, which are harmful to human health and membrane filter, by retaining organic substances and high amounts of cancerogenic chlorine and chlorine compounds.
- 3rd stage: Block carbon filter is used for more sensitive particle filtration to retain the suspended materials in the water.
- 4th stage: Membrane filter. The semi-permeable membrane with 8-12 angstrom pores retains bacteria, viruses and heavy metals in the water at 95-98% and pollutant runs to the drainage through wastewater part of membrane.
- 5th stage: Last carbon filter (post carbon). Water runs through the carbon filter at the last stage to provide clean and extremely safe drinking water.

POINTS TO BE CONSIDERED BEFORE INSTALLATION OF THE DEVICE


Water treatment system's operating water temperature is between minimum 5°C (41°F) and maximum 40°C (104°F). It has risk of freezing to operate the device below 5°C as it carries risk of damage to filters when operated at above 40°C.

It is necessary to select a suitable location first for installation of water treatment device. It must be considered during selection that installation place should be close to cold water line of the RO device and to the drainage and sufficient space should be left for working in case of malfunction and filter replacement.

Water treatment device is designed for water with specifications close to tap water, whose inlet conductivity is max. 600 ppm and the turbidity is max 3 NTU. If raw water source and specifications are unknown, the raw water should be sent for analysis before installation of the device in order to check the suitability.

If the device is used beyond the limit values mentioned in technical specification part of the users' manual, the requested quality will not be achieved for product water. Usage of such feed water will cause variation in replacement periods of filters and membrane.

Inlet pressure is between 3 - 6 bar for water treatment devices without pump and between 1 - 6 bar for water treatment devices with pump. The optimum working pressure is 3 bar. In case the inlet pressure is above 4 bar, it is recommended to install a pressure reducer to prevent more wastewater discharge. Do not connect the device to power socket before it is installed.Our company will not be liable for any problems caused by non-observance of the above warnings.

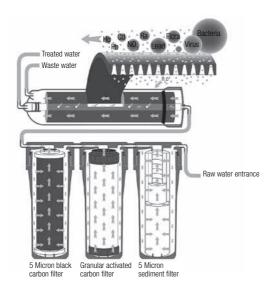

TREATMENT DEVICE FLOW SCHEME

8 | PALLAS VIVA 6T

MANUAL BOX CONTENTS AND ASSEMBLY PARTS

		2	3
4	5	6	7
т 	5		
•			
8	9	10	11
12	13	14	

- 1. Reverse Osmosis Device
- 2. Star Faucet
- 3. 10" White Housing (Double O-ring)
- 4. 10" Block Carbon Cartridge Filter (CTO)
- 5. 10" GAC Carbon Cartridge Filter (UDF)
- 6. 10" Inline Coconut Post Carbon Filter
- 7. 10" 5 Micron Spun (Sediment) Filter
- 8. 75 GPD Membrane

- 9. Metal Ball Valve
- 10. Pump
- 11. Adapter
- 12. Tube
- 13. Feed water Connection Adapter
- 14. Shut off valve
- 15. Storage tank
- 16. Users Manual and Warranty Certificate

NOTE: Pump and adapter is not included in models without pump.

USERS MANUAL | 9

DEVICE PROPERTIES

TECHNICIAL SPECIFICATIONS

	WITH PUMP	WITHOUT PUMP
Min. Operating Water Temperature	5 °C	5 °C
Max. Operating Water Temperature	40 °C	40 °C
Min. Inlet Pressure	1 bar	3 bar
Max. Inlet Pressure	6 bar	6 bar
Max. Inlet TDS (ppm)	600 ppm	600 ppm
Max. Inlet Water SDI	3	3
Inlet Diameter	8 - 10 mm	8 - 10 mm



(NSF.

10 NOTE: The equipments used in the product are in compliance with Water Quality, CE and NSF standards. The equipments are certified.

10 | PALLAS VIVA 6T

MANUAL INSTALLATION AND ASSEMBLY

HOW TO ASSEMBLE

SINGLE BATTERY WATER INTAKE








- 1. Before the installation, turn off the valve of main feedwater line orthe inlet valve.
- 2. After draining the remaining water in the pipes, install feedwater connection adapter (3-way adapter) by fastening with teflonband (Figure A-2)
- 3. Install 1/4" metal ball valve on the feedwater connection adapter (3-way adapter) by means of teflon band so as to turn on/off easily (Figure A-3).
- 4. Install 8 mm water inlet tube to the 1/4 "metal ball valve. Note that the ball valve is closed.
- 5. Then, turn on the valve of main feedwater line or the inlet valve and check whether there is any leakage.

MOUNTING THE FAUCET

- 1. In case of drilling countertop or sink, faucet for clean water must be installed carefully in terms of usage and aesthetics. You can start to drill countertop or sink after leaving enough space for installation of seal, nut and union at the bottom of countertop or sink. Otherwise, you may drill the wrong place.
- 2. If you drill marble, granite ceramic, laminate or sheet metal sink, first you should use 5 mm drilling bit and then 12 mm drilling bit, respectively. The drill must be operated at low speed and without impact. If the counter is covered with tile-coated cast concrete, it must be drilled with a diamond bit. (Figure A-4)
- 3. Outer length of the faucet is 7 cm. If the counter is thicker than 7 cm, you'll need to use fittings as many as required. Finally, place the faucet into the hole, adjust its joints and tighten the nuts.
- 4. Filters should be washed before use to run out residues on them (check washing procedures page).

The images in the manual may not be identical to each other.

🛈 NOTE: If you do not want to drill the under counter sink and washbasin, you can also install it by using a single faucet. Contact your authorized service for replacement of the faucet adapter, which you have used, with the three-way one through which hot, cold and purified water flow (Extra charge for the faucet)

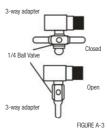

WATER INTAKE IN UNDER COUNTER







USERS MANUAL 11

MANUAL INSTALLATION AND ASSEMBLY


MEMBRANE INSTALLATION

- 10" 5 Micron Spun (Sediment) Filter
- 10" GAC CArbon Cartridge Filter (UDF)
- 10" Block Carbon Cartridge Filter (CTO)
- 75 GPD Membrane
- 10" Inline Coconut Post Carbon Filter

• After intalling the filters, unscrew membrane housing cap. Insert the membrane into the housing until it stops. Then, screw the housing cap.

• Cut the tube to a length that will allow to connect the post carbon filter outlet to the faucet after mounting the faucet and drain line.


• Loosen and pull out stem-nut on outlet of the post carbon filter. Put the nut on tube and tighten firmly. Insert the other side of the tube into respectively yellow nut and collet placed under the faucet. Push the tube to the faucet and tighten the nut firmly.

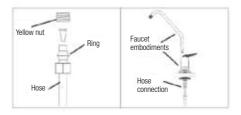

HOSE CONNECTION SCHEME

As shown in figure;

- A: Water inlet
- B: Product water tube is connected to RO faucet.
- C: The tube at the outlet of post carbon is connected to product water line.
- D: The drain tube is connected to wastewater outflow line.

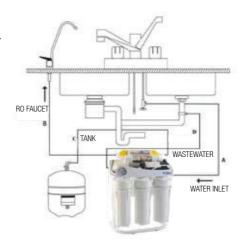

MANUAL INSTALLATION AND ASSEMBLY

START-UP AFTER INSTALLATION

Once you have assembled and installed all the components, turn on the water supply first tocheck for leaks. Then, turn on the faucet slowly. At the first stage, water will run from the faucet slowly. Let it run in this way for 10 minutes. If the waterstarts to drip and do not reach normal flowrate, it probably means that the water pressure isso low that the device cannot perform with 100 % efficiency. If you are experiencing such a problem, see Trouble-shooting on page 20.

Now your device is ready for usage, you can enjoy quality water safely.

I! IMPORTANT !!

*During the first few days after installation, air bubbles may be seen in the water.

*Water treatment device will work better and longer when it is used more often. For this reason, we recommend you use the purified water for cooking, preparing tea, coffee etc. *In case of water leaks, broken filters etc., turn off the valve of water supply and correct the faults.

MAINTENANCE AND CLEANING

REPLACEMENT PERIODS OF CARTRIDGE FILTERS

5 Micron Spun (Sediment) Filter:

It should be replaced approximately every 6 months depending on the water contamination.

GAC Carbon Cartridge Filter (UDF):

If the water is clear and the total amount of chlorine is low, the cartridge life is 6 months on average.

Block Carbon Cartridge Filtre (CTO):

The cartridge life is approximately 6 months depending on the amount of chlorine in the water and replecament periods of pre-filters.

Membrane Filter:

The membrane life is approximately 3 years depending on the regular maintenance.

10" Inline Coconut Post Carbon Filter:

The cartridge life is approximately 12 months.


If feeding tube is damaged, it should be replaced with a specially prepared tube or tube set supplied by the manufacturer or authorised service.

MAINTENANCE AND CLEANING

INSTALLATION AND REPLACEMENT OF MEMBRANE

- 1. Disconnect the plug from the socket.
- 2. Turn off the water supply valve.
- 3. Turn the Jaco fittings clockwise.
- 4. Unscrew membrane housing's cap by turning it clockwise.
- Grasp the membrane with a clamp and pull out.
 Push new membrane carefully into the housing until it stops.

After installing the membrane, screw the cap and reinsert the tube in the same way. Open RO tap to clean the newly installed membrane filter. Let the system run for 2 hours and the water run out. Then, you can drink the purified water.

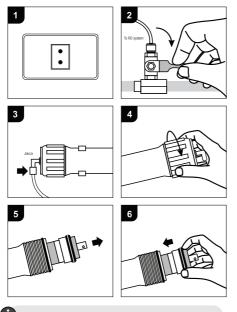

The device can be used by the children, who are above 8 years old; physically, sentimentally or mentally disabled persons or people with lack of experince and knowledge on the condition that they are trained or instructed about safe usage of the device and have understood the hazards. The children must not play with the device. The maintenance must not be carried out by the children without observance of an adult.

WASHING PROCEDURES

- Open the tube union of 3rd housing and discharge the water supplied to Sedimentfilter, Activated Carbon filter and BlockCarbon filter. Perform washing for 10 minutes.
- 2. First three filters are washed. If post-carbonand mains pressure are present, mineral filter iswashed with the mains pressure for 10 minutes.Wastewater is discharged from the faucet.
- 3. The membrane filter is pushed in the housing with the 0-ring side first and the housing cap is screwed. Water is supplied to the membrane. The water first-supplied to the membrane should be flown out without reaching the tank and the post carbon. The water should be drained for 10 min.

Membrane replacement and housing sanitisation as seen in figures;

- Open drinking water faucet.
- Loose the union of the membrane housing on the water inlet side and disconnect tubing from the housing.
- Unscrew the membrane housing from the cap (with pliers) and displace the used membrane. Clean the membrane housing with disinfectant (bleach solution) and rinse the housing. Wet or wipe the O-ring at the bottom of thenew membrane element for being seated properly. Push the membrane into the housing with o-ring side first. Ensure the membrane fit into the housing properly.
- Screw the cap back onto the membrane housing and tighten with hand or the supplied wrench.
- Finally, place the union at the water inlet side of the membrane properly and tighten firmly.

ATTENTION !!

(1)

The water first-supplied to the device should be discharged after passing through the filters. It should definitely not contact the tank and post carbon

Do not forget to connect the power plug to the socket in models with pump.

14 | PALLAS VIVA 6T

MAINTENANCE AND CLEANING

REPLACEMENT OF POST CARBON FILTER

- Turn off the water supply and open drinking water faucet.
- Loose tubing unions at inlet and outlet and discard the used post-carbon.
- Disconnect the union placed at the outlet of the filter. To prevent leaks, apply teflon tape to the T-connector on water supply and install the filter.
- · Tighten the tube unions.

WARNING: FLOW marking on the filter shows the direction of the water outlet. Ensure not to insert it backwards and do not over-tighten T-connector and the union on the other side.

The treatment device must not be supplied with hot water. Otherwise, all filters will be damaged and the device will be out of warranty.

Water Treatment Device is designed for easy installation and maintenance. It is essential not to exceed the recommended replacement periods of cartridge filters and to use the deviceproperly. When the required maintenance and repair is not provided, the life span of the device is shortened and the efficiency of the membranes is reduced. Such situations may cause certificate of warranty to be void.

SANITISING DEVICE

The water treatment device should be disinfected at least once a year as follows;


- Turn off the water supply.
- Drain all of the water from the tank by opening the faucet (for the models with tanks).
- Add a teaspoon of chlorine to the filter housing and screw back onto the cap.
- Turn on the water supply.
- Repeat this process for 2 times and replace all cartridge filters (for the models with tanks).

PRECAUTIONS TO USE YOUR DEVICE LONGER;

To ensure that your device functions properly and to prolong the life of the device, the following pointsmust be taken into consideration. Otherwise, the warranty will be voided.

- Do not use with water that has temperature above 40°C.
- Place or fix the device on a flat surface.
- Do not touch the valves on the device except when necessary.
- It is recommended to install pressure reducer on water inlet of RO device when installation pressure is high. Ensure that periodical maintenance is performed on time and by the authorized service.
- In case of long periods of non-use, turn off water supply. Follow start-up procedure when you want to re-operate.
- Keep your device clean by wiping with a wet cloth periodically and avoid using harsh and corrosive cleaners.




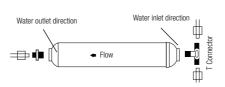

START-UP AFTER MAINTENANCE

After turning on the valves, turn on the water supply. Open RO faucet and check the entire system for leaks.

Now you can enjoy the quality water safely.

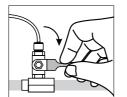

Turn on the mini valve of the water supply as shown in the figure.

TRANSPORTATION AND HANDLING

At first, follow the occupational safety rules.

- Drain the water in the tank before transportation and handling.
- Close the water supply of the tank and if the device model is with pump, disconnect the plug from the socket carefully.
- Demount the device carefully.
- Do not leave your device hanging from a higher place.
- Pay attention to keep the parts in the same place to avoid losing them.
- Keep the device in a dry and closed place.
- Pay attention not to drop, break, shake, crush the device during transportation and handling. Ensure that it does not get damaged due to heat, humidity or dust. Keep it out of sun exposure.
- You can get support from our authorized services to avoid unexpected damages during transportation and handling.

Supply of Spare Parts Under/Out of Warranty:

Warranty period is 2 (two) years from the date of your invoice. You can supply spare parts of this product for 10 (ten) years from the delivery date. The warranty is applicable only to defects in the device and we are not responsible for any other cost. No claim of indemnity can be made under any other name.

PROCEDURE FOR DISINFECTION

WHY SHOULD YOU DISINFECT A DOMESTIC RO UNIT?

RO membranes retain substances from the water which are accumulated in the concentrate water. During the standby of the RO system, the concentrate is standing in contact with the inlet side of the membrane. This standing concentrate can become an optimal environment for the development of a biofilm on the membrane surface. At first, this will have consequences for the flow rate of the produced clean water. But if the biofilm development is not prevented or removed, an additional bacterial contamination could occur in the RO tank, resulting in bacteria presence at the RO faucet.

IMPORTANT MEASURES TO PREVENT BIOFILM DEVELOPMENT

- 1. Do not install the RO unit near a heating element which could increase the ambient temperature
- Heavily biologically contaminated inlet water must pre-treated:
 - If chlorine dosing is applied, the residual chlorine level should be reduced to < 0,2-0,5 ppm
 - If UV is applied, the UV lamp should be installed at a sufficient distance of the RO inlet, in order to limit the slight warming up of the RO feed water
- If biofilm development occurs in the distribution pipelines and chlorine shock is applied, resin units, RO units or other water treatment systems which are sensitive to high chlorine dosages, should be closed or bypassed during this procedure and disinfected separately by their specific cleaning procedures.
- 4. Pre-filters must be replaced at least every 6 months. The unused pre-filters must be stored in their original state on a bacterial safe place and opened from their protection film by wearing sterile or clean disposable gloves just before installation. The membrane is only replaced at persistent low or reduced performance.

It is highly recommended to apply the following disinfection procedure each time you replace the pre-filters:

DISINFECTION OF RO COMPACT UNITS WITH OSMO CLEAN

- 1. Purge the RO unit and tank by disconnecting the power supply (if present), close the water inlet valve and open the RO water outlet faucet.
- 2. Unplug the inline pre-filter cartridges by removing the lock-ring, pushing the seal-lip towards the filter and pulling out the tubing. The cartridges must be replaced one by one by a spacer tube on which the reference of the removed cartridge is marked. This will enable the passage of the pure disinfection solution to the membrane surface and will allow an easy recognition of the new cartridge positions.
- An additional Pallas filter housing with John Guest 1/4" IN & OUT connections and with riser tube is installed in the inlet water tubing. It is recommended to fix this extra housing permanently next to the RO.
- 4. Unscrew the filter bowl using the bowl key, empty the bowl if necessary, add 250 mL Osmo Clean and reconnect the bowl correctly.
- Close the RO water faucet, open the water inlet valve and reconnect the power supply in order to push the disinfection solution through the membrane drain side and let flow for 1 minute.
- Close the water inlet and open the RO water faucet to release the pressure. Take out the membrane and close the membrane tube again. The membrane is left with the disinfectant inside for further reaction.
- Pour once more 250 mL of Osmo Clean in the bowl, screw it back, open the water inlet and let flush for another minute. Close the water inlet and let stand for minimum 15 minutes to react in the RO tank.
- Remove the protection film from the replacement filter cartridges and connect them correctly in the respective place of the spacer tubes. Verify the correct position of the different filter cartridges by checking the indication labels and by consulting the manual (see flow diagram and given instructions). Open the water inlet and let flush for 3 minutes.
- 9. Close the water inlet and remount the membrane with the big seal on the back side. Close the RO water faucet, open the water inlet and let fill the RO tank completely (30 minutes for RO with pump, 60 minutes for RO without pump). Open the RO water faucet to purge completely. The RO is now ready to refill the RO tank with clean water.



EXCLUSIONS FROM THIS WARRANTY

The warranty excludes defects caused by the misuse of water treatment device. The consumer should pay attention to the following points;

- Damage and defects caused by the misuse,
- Damage and defects during loading, handling and transportation after the delivery to the customer,
- Low or high voltage, damages and defects due to electrical faults,
- Defects resulting from failure to comply with instructions specified in the users manual,
- Replacements of membrane and filters are out of warranty. They are consumable elements.
- Warranty period of product is 2 (two) years in case of manufacturing defects.
- Exeeding minimum span for repair of the device.

Damages and defects resulting from the above-mentioned matters are not covered by the warranty and the service can be provided in return of a fee. The responsibility for handing over the warranty certificate to the consumer is of seller, dealer, agent or representative who sells the product.

In the event that the warranty certificate is tampered and altered, the warranty certificate will be invalid.

DAMAGES AND DEFECTS DUE TO THE MISUSE

- Loss of original parts of the device or demounting the parts contrary to the instructions.
- Damages and defects resulting from the factors such as crash, scratch, break etc.
- Damages and defects due to transportation and storage conditions.
- Damages and defects resulting from replacement or damage of electrical cable connections.
- Damages or defects resulting from paint or stain on any part of the product.
- Damages or defects due to sticking any label on the device.

- · Damages or defects due to natural disasters.
- Damages or defects resulting from running the device with water below 5°C degrees and above 40°C degrees.
- Damages or defects due to electric networks.
- Damages or defects due to replacement of parts or materials in the device by any other parties which are not an authorized service.
- Damages or defects due to unknown material found inside the product.
- Problems resulting from failure to comply with installation, operation or maintenance instructions or drawings, or improper installation, operation or maintenance.
- Damages and defects resulting from using non-original spare parts and accessories.
- Damages and defects resulting from running the product without water or inadequate water.
- Damages and defects due to failure to perform periodical maintenance and controls.
- Damages and defects resulting from clogged wastewater drain and running the clogged device.

Defects that are not covered by the warranty will be repaired at our authorized service centers.

 \mathbf{i}

Warranty certificates without dealer's stamp and signature, sales date, brand and model are invalid. The original or photocopy of the invoice must be kept and submitted with the warranty certificate if necessary. Otherwise, the date of manufacture on the device will be deemed as beginning of warranty. The customer cannot claim rights or indemnity other than these undertakings.

IMPORTANT SAFETY AND ENVIRONMENTAL INSTRUCTIONS & CONSUMER RIGHTS

INFORMATION ON POTENTIAL HAZARDS FOR ENVIRONMENT AND HUMAN HEALTH DURING OPERATION

- Please note that the ground on which electrical devices are placed is dry and isolated.
- There is no important issue that will threaten the environment and human health during use.
- When life span of your device expires, send it to recycle.

LIFE SPAN OF THE DEVICE

The product has a service life of 10 (ten) years if you comply with the maintenance and operation instructions specified in the manual. Otherwise, life of the device may be shortened. As long as the device is not exposed to high temperatures and sun, you can use the device efficiently for many years.

INFORMATION OF EFFICIENT USE IN TERMS OF ENERGY CONSUMPTION

- If you do not use the Water Treatment device with pump more than 3 days, turn off the device and disconnect the plug from the socket.
- Pay attention not to forget the faucet open.
- Disconnect the power to avoid both damage to the device and excessive power consumption in case the voltage is too low or too high.
- Avoid wasting your water.
- Do not place the device in direct sunlight or near heat-emitting devices.

CONSUMER APPLICATIONS FOR COMPLAINTS AND OBJECTIONS

- In case the warranty certificate is not provided by the seller, the consumer may apply to the Customs and Trade Ministry, General Directorate for Protection of the Consumer and Market Surveillance.
- Consumer may apply to the consumer arbitration board or the consumer court where the consumer resides in or the products have been purchased for the disputes that may arise in connection with the exercise of the rights arising from the warranty.

RIGHT OF CHOICE PROVIDED TO CONSUMER WITH 11th ARTICLE OF LAW

- 1. If the product is found defective;
- Consumer can renege on the contract by notifying the seller that they are ready to get back the product.
- Consumer can retain the defective product and ask for discounts at the defect rate on sales price.
- Consumer can ask for repair free in case it does not cost much,
- Consumer can ask for replacing the defective product with another product if possible by using right of choice. The seller is liable for fulfilling the consumer's demand.

2. Consumer can apply to the manufacturer or importer for repair or replacement of the defective product without any charge. The seller, manufacturer and importer are successively responsible for fulfilling the conditions based on the rights.

3. In the event that consumer prefers to use the right of free repair and;

- · The product re-fails during warranty period,
- The maximum time required for repair is exceeded,
- If repair is not possible and determined with a report by an authorized service, seller, manufacturer or importer,

Consumer may request from the seller to refund, discount at the defect rate or replace the product with non-defective products if possible.

The seller cannot refuse the consumer's demand in such situations. If this claim is not fulfilled, the seller, producer and importer are severally liable.

It is a eco-friendly, new energy saving source.

USERS MANUAL | 19

TROUBLESHOOTING

Problem	Possible Cause	Action
	No water supply	Ceck if water enters the system
THE DEVICE DOES	Faulty connection to power source	Check the electrical connections
NUT WURK	Damaged adapter	Replace it or contact service
	Faulty low pressure switch	Replace it or contact service
	Water supply valve is closed	Open the water supply valve
NO PRODUCT (PURIFIED) OR WASTE WATER FLOW	Clogged filters	Replace the clogged filters.
	Clogged liners	Replacement of flow restrictor is recommended.
SLOW OR NO PRODUCT	Clogged or exhausted membrane	Replace the membrane
WATER FLOW BUT THERE IS WASTE WATER	Faulty check valve	Replace check valve
FLOW	Faulty storage tank	Replace the tank
TANK IS FULL BUT THERE IS WASTE WATER FLOW	Too low or high pressure	Pump should be used for water with low pressure as pressure reducer is recommended for water with high pressure.
FLUW	Faulty check valve	Replace check valve
	Faulty connection	Check all connections
LEAKS IN DEVICE	Not properly cut edges of tubes	Remove leaking tubes, cut the edges straightly and replace them.
	Not properly fitted gaskets	Fit the gaskets
	Exhausted cartridge filters	Replace the filters if they are used up for 6 months.
UNPLEASANT ODOR AND TASTE OF PURIFIED WATER	Low pH level	Ideal pH level is between 7-8. If lower, ask your service for installing a pH meter. (Not covered by warranty)
	Bacteria in the device	Disinfect your device
	Clogged flow restrictor	Replace flow restrictor
NO WASTE WATER FLOW	Filter maintenance date has expired	Replace filters and membrane element
SLOWLY FLOW OF PURIFIED WATER FRO FAUCET	Faulty storage tank	Replace the tank

20 | PALLAS EF300

FREQUENTLY ASKED QUESTIONS

"How often should filters be replaced?"

It depends on properties, quality of water supply and usage frequency of the system. It is recommended to replace filters every six months. We recommend that you replace post carbon filter cartridge once a year and membrane every three years.

"I have replaced the cartridges newly and the water is cloudy. Is it normal?"


After you have replaced the filters, you shoulddrain the water for a few minutes. Because carbon filters are made of natural materials, cloudy black water may flow for a while (10-15 minutes), Keep your faucet open and turn off the tank valve. Allow the water to run out until the water is clear.

"I do not often use the system, does it change life span of filters and membrane?"

Replacement dates of the first three filters do not change; living organisms (microbes,bacteria) are settled in the filters during filtration. Therefore, first contact with water is deemed as beginning of replacement period.Less usage of the system affects only replacement period of membrane.

"Can I assemble the device and replace filtersmyself?"

Yes, you can. However, any other practise not performed by a service provider will cause the warranty to be voided. If the service is provided by an authorised personnel, the device will continue to be under warranty till the expiration date of warranty.

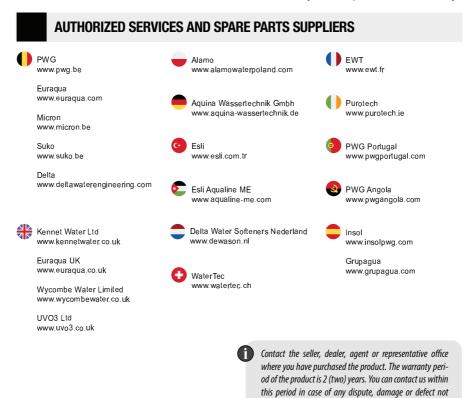

resulting from misuse;

MANUEL DE L'UTILISATEUR | 21

<section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><text><text><text><text> This document is allowed to be used by Directorate General of Consumer Protection and Market Surveillance. Republic of Turkey Customs and Trade Ministry in accordance with the Regulation of Practice Principles of warranty Certificate that is implemented by depending on Consumer Protection Law Numbered 6502 : ESLİ END. ÜRÜN. PAZ. SAN. ve TİC. LTD. ŞTİ. O.S.B. 1. Kısım Antalya Bul No:36 DÖŞEMEALTI/ANTALYA

TYPE	: WATER TREATMENT DEVICE
BRAND	: Pallas
MODEL	: Viva 6T WITH STAND WOP/WP
WARRANTY	: 2 YEARS
MAX. REPAIR TIME	: 20 WORK DAY
BANDEROL AND SERAL NO	

RUGHT OF CHOICE PROVIDED TO CONSUMER WITH 11th ARTICLE OF LAW

a) Consumer can renege on the contract by notifying the seller that they are ready to get back the product.

b) Consumer can retain the defective product and ask for discounts at the defect rate on sales price.

c) Consumer can ask for repair free in case it does not cost much. d) Consumer can ask for replacing the defective product with another product if possible by using right of choice. The seller is obliged to fulfill this request wich is prefered by the consumer.

(2) Consumer can apply to the manufacturer or importer for repair or replacement of the defective product without any charge. The seller, manufacturer and importer are successively responsible for fulfilling the conditions based on the rights

If consumerp refers to use the right of free repair and;

b) The maximum time required for repair is exceeded, c) If repair is not possible and determined with a report by an authorized service, seller, manufacturer or importer,

Consumer may request from the seller to refund, discount at the defect rate or replace the product with non-defective products if possible. The seller cannot refuse the consumer's demand in such situations. If this claim is not fulfilled, the seller producer and importer are severally liable.


CONSUMER APPLICATIONS FOR COMPLAINTS AND OBJECTIONS

In case the warranty certificate is not provided by the seller, the consumer may apply to the Customs and Trade Ministry, Directorate General fro Protection of the Consumer and Market Surveillance.

Consumer may apply to the consumer arbitration board or the consumer court where the consumer resides in or the products have been purchased for the disputes that may airse in connection with the exercise of rights arising from the warranty.



The product you have purchased complies with the standards of 2014/35/EU;

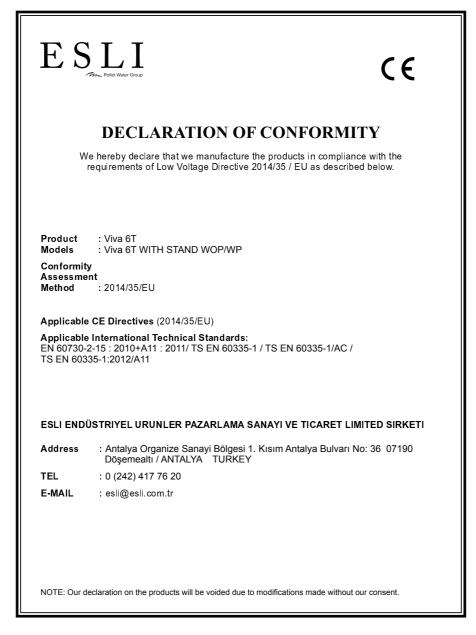

CHER CLIENT,

Les systèmes de traitement de l'eau utilisent le système d'osmose inverse, qui est l'une des technologies de pointe dans le monde.

Les systèmes de traitement de l'eau ont été conçus pour éliminer les polluants physiques, chimiques et microbiologiques présents dans l'eau afin de produire une eau de qualité potable.

Les systèmes de traitement de l'eau produisent non seulement de l'eau potable, mais également une eau de la meilleure qualité possible pour répondre aux besoins de la consommation domestique. Cela vous aide à apprécier le vrai goût de la nourriture et des boissons.

Les systèmes de traitement de l'eau fournissent de l'eau saine pour que vous puissiez mener une vie saine. Le produit est fabriqué dans des installations modernes sans nuire à l'environnement. Il est recommandé de lire très attentivement le manuel avant d'utiliser le produit, qui est fabriqué avec précaution.

« Merci d'avoir choisi notre produit. »

CE

DÉFINITIONS DES SYMBOLES UTILISÉS DANS LE MANUEL



Informations importantes et recommandations sur l'utilisation de l'appareil

Risque d'incendie



Avertissement de choc électrique



Avertissements contre les dangers pour la sécurité des personnes et des biens



| PALLAS VIVA 6T

24

Avertissement de surface chaude

INFORMATIONS SUR L'EMBALLAGE



Les matériaux d'emballage sont fabriqués à partir de matériaux recyclables conformément à la réglementation nationale. Les déchets d'emballage ne doivent pas être jetés avec les déchets ménagers ou autres. Veuillez collecter les déchets d'emballage dans les centres de collecte.